

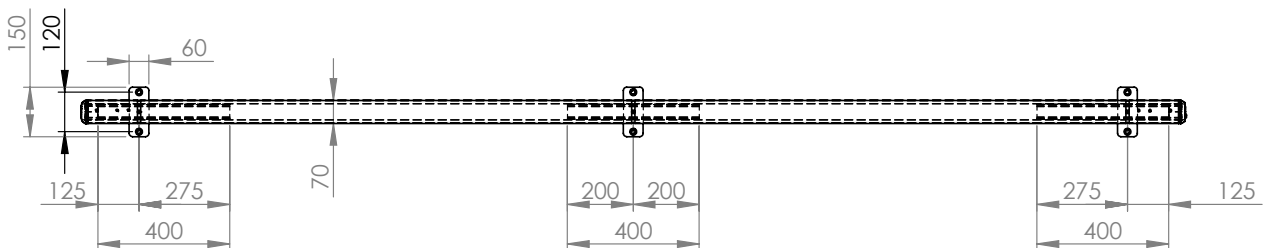
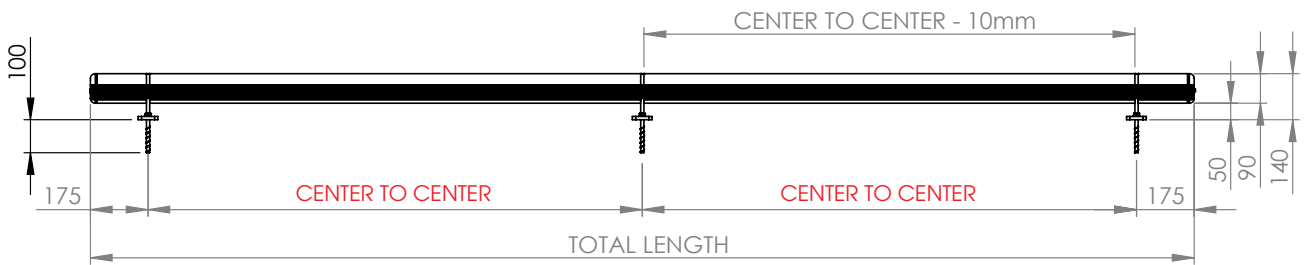
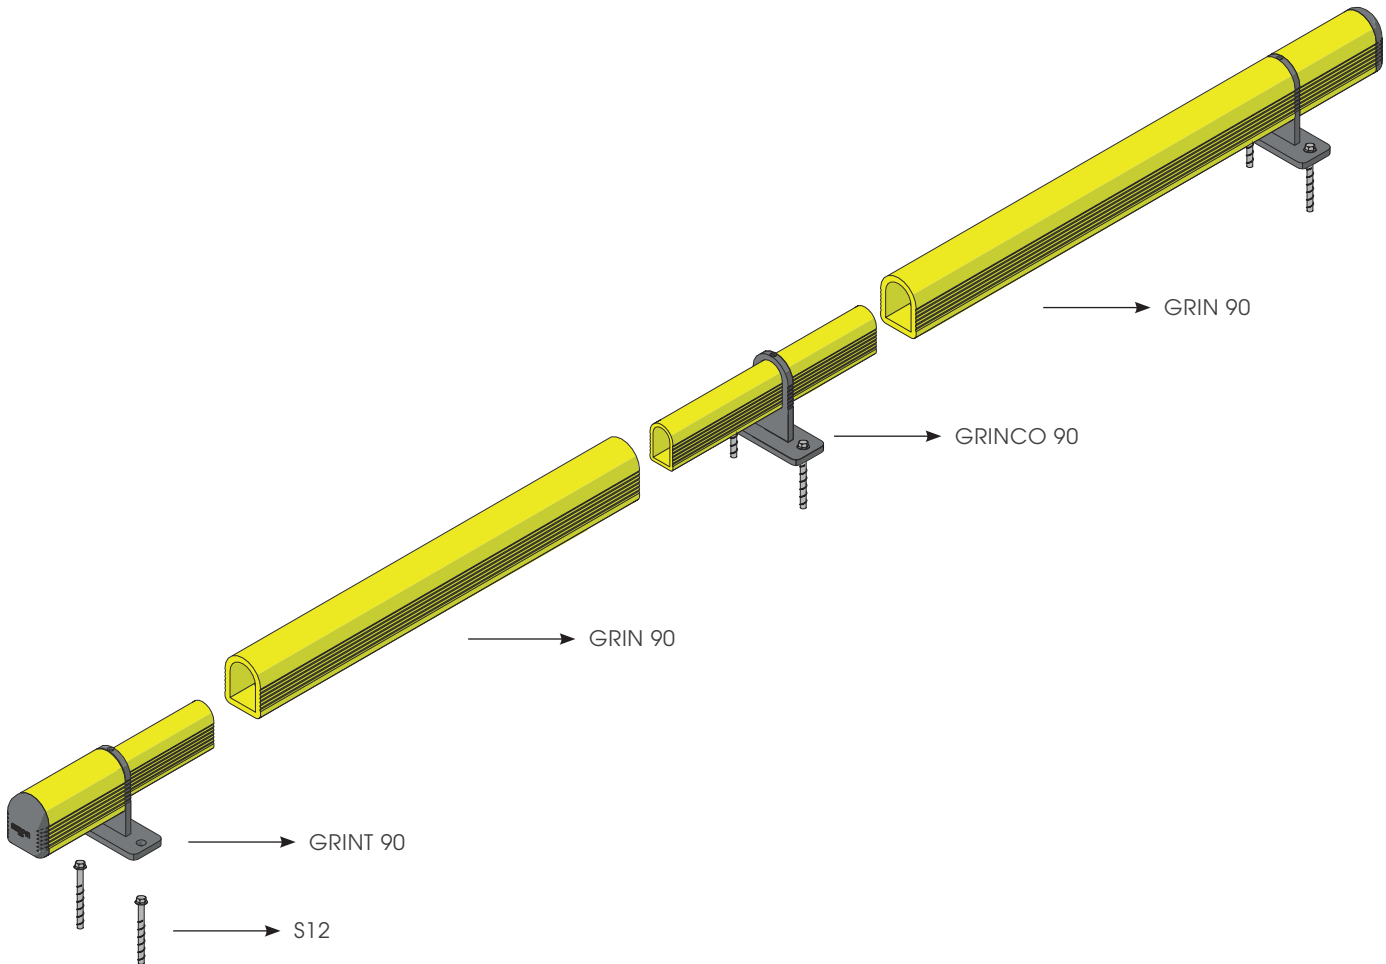
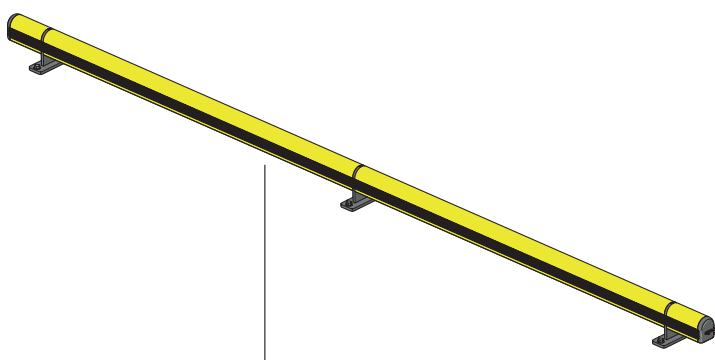
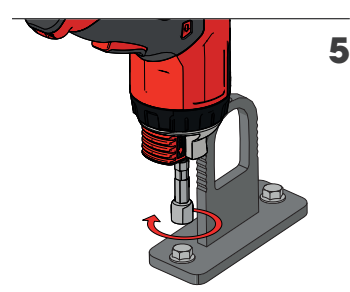
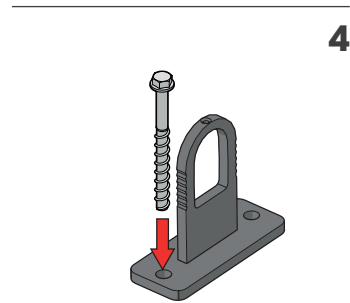
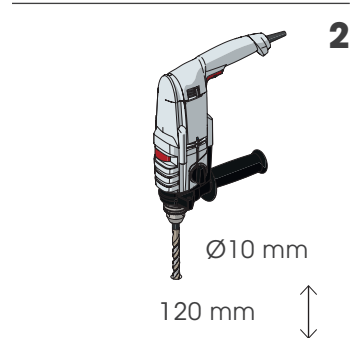


GRIN 90


GUARD RAIL CONTINUO
CONTINUOUS GUARD RAIL

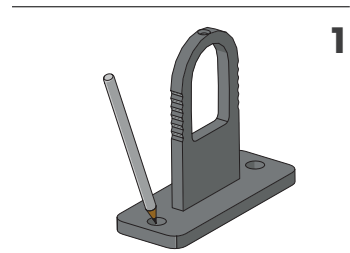

GRIN 90/150

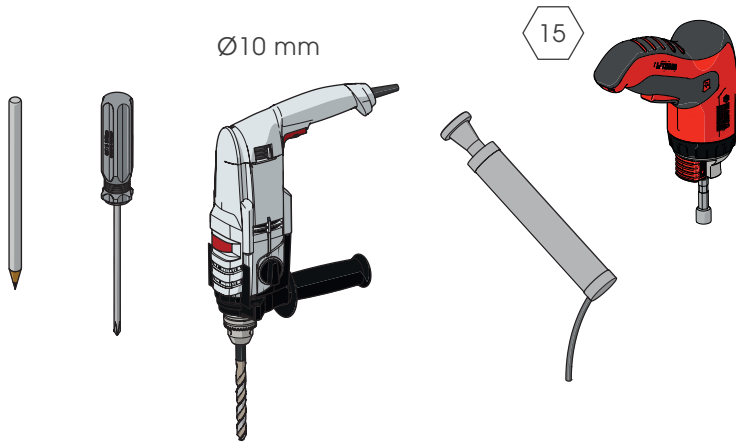


WARNING
The distance of installation depends on speed and weight of vehicle

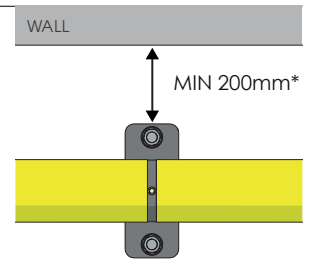


GRIN 90/150

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS


6

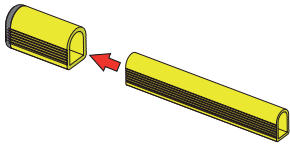


7

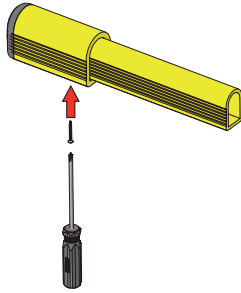


8

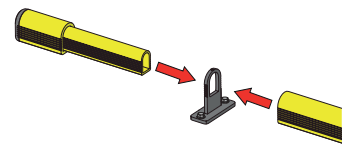


9

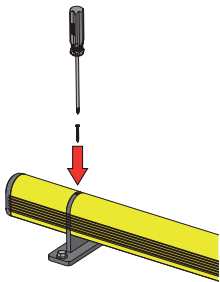


10

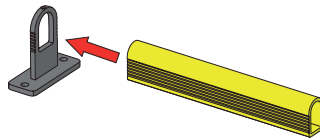


11

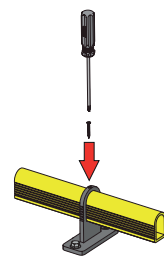


12

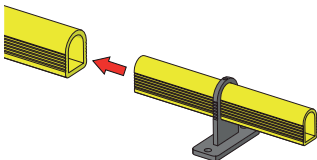


13

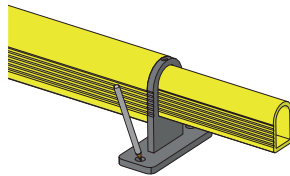


14

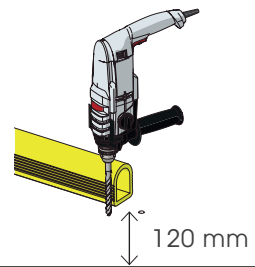


15

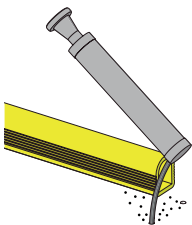


16

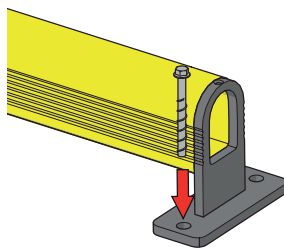


17

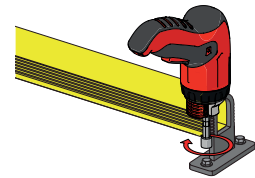

18

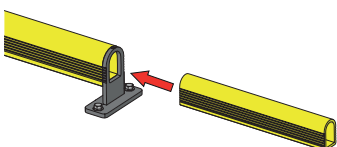

19

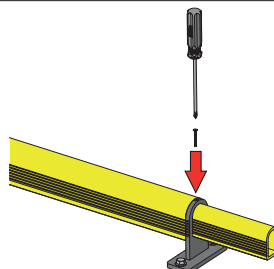

20

