GRD 90

PALO PROTEZIONE
BOLLARD

LIGHT LOAD / FOR HAND PALLET TRUCKS

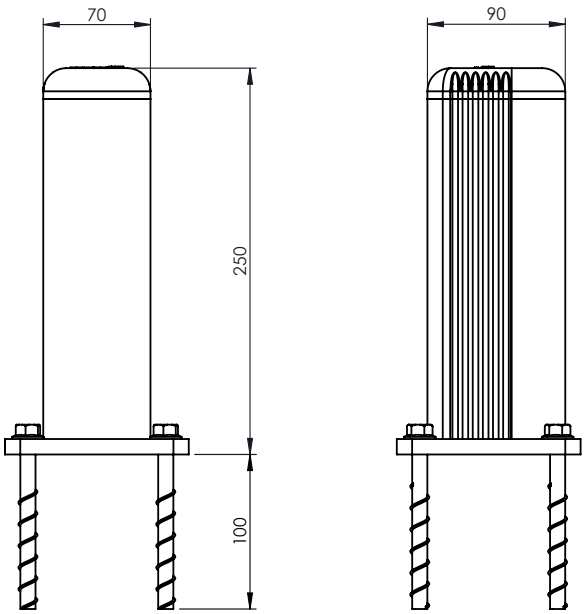

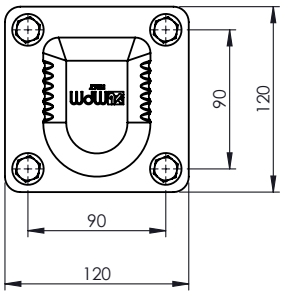

GRT 90

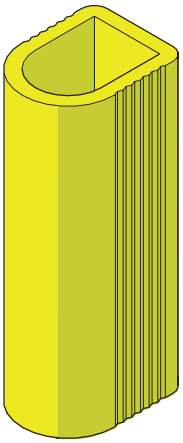

GR 90

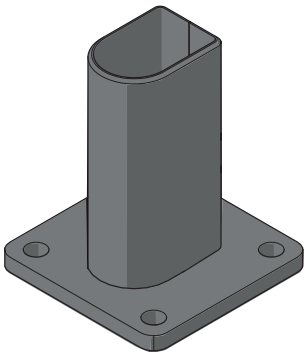

FIX P 90

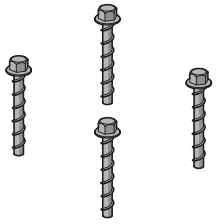

S12

GRD 90/150/150 PLUS

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

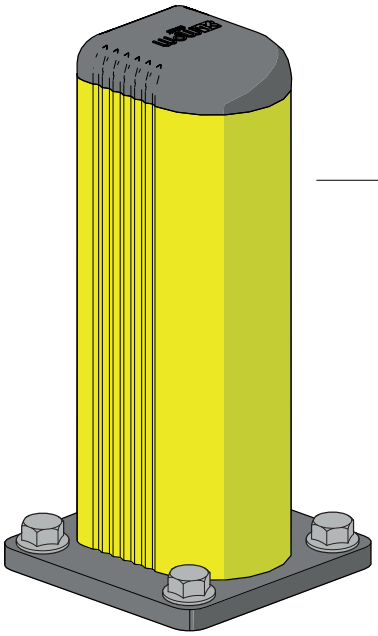

WARNING

The distance of installation depends on speed and weight of vehicle

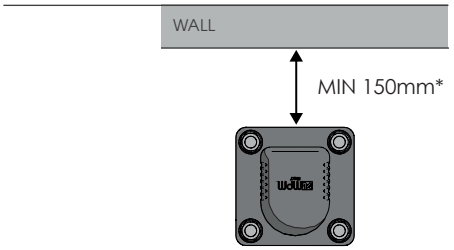

GRD 150 PLUS

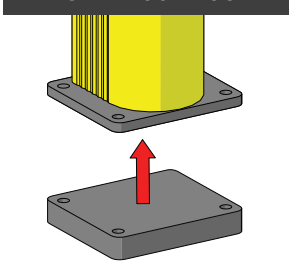

1

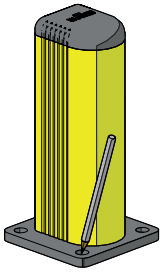

2

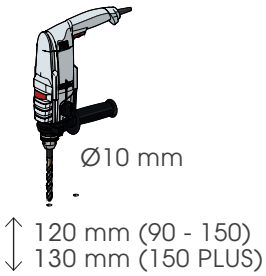

3

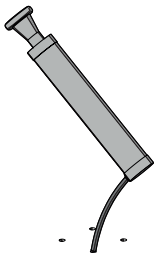

4

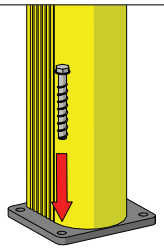
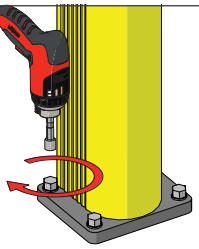
5